

FRAMELESS GLASS DOOR HARDWARE



RIGHT HAND SIDELITE MOUNTED TRANSOM PATCH WITH SUPPORT FIN BRACKET

Works with both 2-3/4" (70mm) and 2-9/16" (65mm) pivot backset door patch fittings



GLASS FABRICATION REQUIRED:

One 3/4" (19mm) diameter hole and corner notch

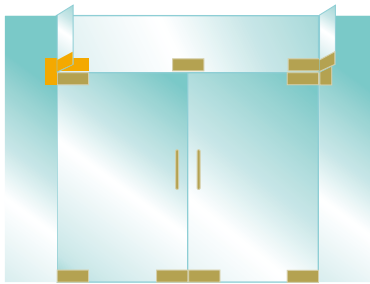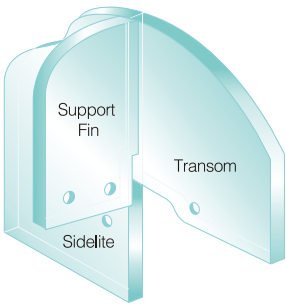


TYPICAL STORE ENTRANCE WITH SUPPORT FINS
(Viewed from the Inside)

ITEM NO.	FINISH
PF41 - RH - AL	ALUMINUM
PF41 - RH - PB	POLISHED BRASS
PF41 - RH - BS	BRUSHED STAINLESS
PF41 - RH - PS	POLISHED STAINLESS



LEFT HAND SIDELITE MOUNTED TRANSOM PATCH WITH SUPPORT FIN BRACKET

Works with both 2-3/4" (70mm) and 2-9/16" (65mm) pivot backset door patch fittings

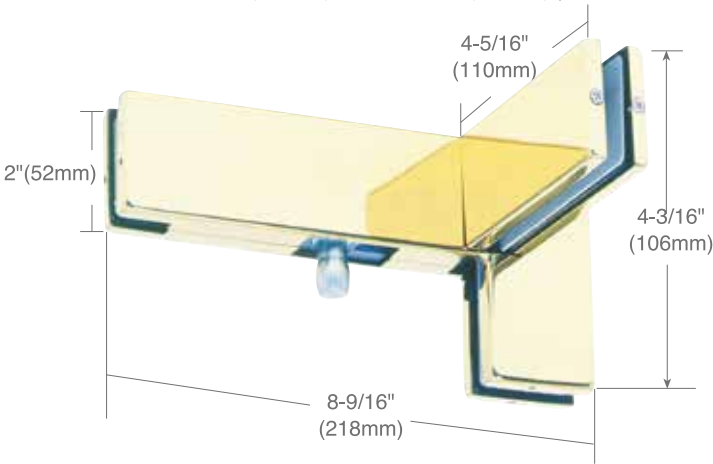

GLASS FABRICATION REQUIRED:

One 3/4" (19mm) diameter hole and corner notch

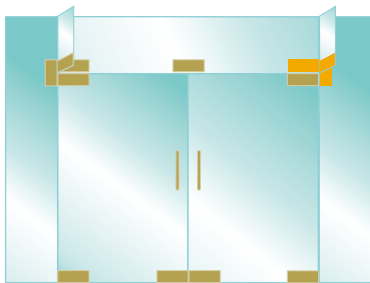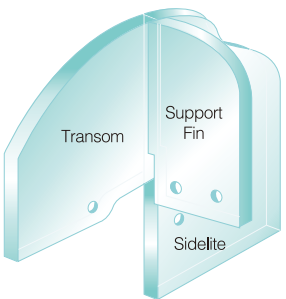

TYPICAL STORE ENTRANCE WITH SUPPORT FINS
(Viewed from the Inside)

ITEM NO.	FINISH
PF41 - LH - AL	ALUMINUM
PF41 - LH - PB	POLISHED BRASS
PF41 - LH - BS	BRUSHED STAINLESS
PF41 - LH - PS	POLISHED STAINLESS